

## Setting Procedure for JLR-30/JLR-30

Even if rollover occurs in the JLR-20/JLR-30, the correct date can be displayed by initial setting.

### Initial setting procedure for JLR-20/JLR-30

1. The Main Menu can be invoked by pressing the **MENU** key.
2. Press and hold both **MENU** and **\*** for 3 seconds or more to display the Maintenance Main Menu.
3. Selecting **GPS**, the GPS Settings Screen displays.
4. Selecting **INITIALIZATION**, the parameters of GPS receiver can be set.

<b>INITIALIZATION</b> 12:16:23 U
LATITUDE : 35° 00. 00' N
LONGITUDE : 135° 00. 00' E
ANT HEIGHT : 20m
DATE (DD-MM' YY) : 30-01' 07
UTC (HH:MM:SS) : 12:00:00
<b>SET</b>
W84 <span style="float: right;">BG</span>

5. Press the **▲** **▼** keys to move the cursor and select an item.
  - LATITUDE: Enter the approximate ship's latitude.
  - LONGITUDE: Enter the approximate ship's longitude.
  - ANT HEIGHT: Enter the sensor height above the waterline.
  - DATE: Enter today's date in UTC.
  - UTC: Enter the present time in UTC.
  - SET: Send the value to the sensor.
6. Press the **ENT** key to display the menu for the selected item.
7. Values can be selected with the **▲** **▼** keys, and the cursor position can be changed with the **◀** **▶** keys.
8. Press the **ENT** key at the **SET**.

