

Setting Procedure for JLR-21/JLR-31

Even if rollover occurs in the JLR-21/JLR-31, the correct date can be displayed by initial setting.

Initial setting procedure for JLR-21/JLR-31

1. The Main Menu can be invoked by pressing the **MENU** key.
2. Press and hold both **MENU** and ***** for 3 seconds or more to display the Maintenance Main Menu.
3. Selecting **GPS**, the GPS Settings Screen displays.
4. Selecting **INITIALIZATION**, the parameters of GPS receiver can be set.

| |
|---|
| INITIALIZATION 12:16:23 U |
| LATITUDE : 35° 00. 00' N |
| LONGITUDE : 135° 00. 00' E |
| ANT HEIGHT : 20m |
| DATE (DD-MM' YY) : 30-01' 07 |
| UTC (HH:MM:SS) : 12:00:00 |
| SET |
| W84 BG |

5. Press the **▲** **▼** keys to move the cursor and select an item.
 - LATITUDE: Enter the approximate ship's latitude.
 - LONGITUDE: Enter the approximate ship's longitude.
 - ANT HEIGHT: Enter the sensor height above the waterline.
 - DATE: Enter today's date in UTC.
 - UTC: Enter the present time in UTC.
 - SET: Send the value to the sensor.
6. Press the **ENT** key to display the menu for the selected item.
7. Values can be selected with the **▲** **▼** keys, and the cursor position can be changed with the **◀** **▶** keys.
8. Press the **ENT** key at the **SET**.